

AeroGarden® | **Quick Setup Guide**

Welcome to the World of In-Home Gardening!
Simple Steps to Get Your AeroGarden Up and Growing (No Tools Required)



Harvest

Model number:

100690-BLK / GRY / WHT / RED



Harvest 360

Model number:

100692-BLK / WHT / RED



Harvest Slim

Model number:

 
100694-BLK / WHT / SGE

Garden Input: 12Vdc, 2.5A • Adapter Input: 100-240Vac, 50/60Hz • Adapter Output: 12Vdc, 2.5A

Get Growing in 4 Fast & Easy Steps!


1

Make sure that Bowl is securely seated in Base and that Grow Deck is properly aligned on Bowl.

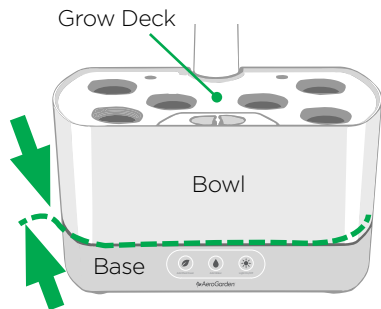

2

 Make sure that Pump Cord is plugged into the connector at the back of the base. Plug in the Power Cord Adapter.

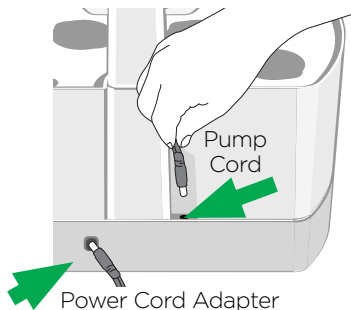


3

Add Water to 'Fill To Here'. Add Plant Food directly to Bowl as per instructions.



4

 Place Seed Pods in openings on the Grow Deck. Cover Seed Pods loosely with Grow Domes.

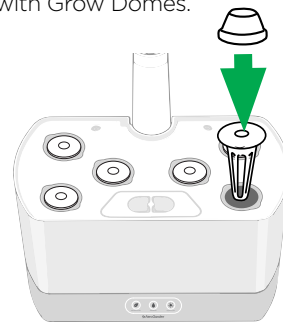

What's Inside



Garden with LED Grow Lights



Power Cord Adapter



Grow Domes



Seed Pods



Plant Food

Good To Know



65-76°F / 16-24°C
Ideal Temperature



4" - 12"
Min / Max Height



Keep Seed Pod Labels On



After Sprouting

What You Need




Just Add Water

Garden Settings



Plant Food

- Add Liquid Plant Food to the Bowl when you first plant your Seed Pod Kit and when the 'Add Plant Food' reminder turns RED every 2 weeks.
- Follow directions on the Plant Food bottle for feeding amounts and top off the water level to 'Fill To Here.'
- Touch the  button once to turn off the alert and to reset the Plant Food timer.

Nurtured by




Watering

- The 'Add Water' indicator will flash RED if the water level drops more than halfway below the fill line.
- It's ok to add water to the 'Fill To Here' line any time. For best growth, keep your garden topped up!


Good To Know:

Your Pump cycle is set to be ON for 5 minutes and OFF for 25 minutes.

If your  button is green, you can touch it once to test your Pump.



Lights

Touch the  button to temporarily turn LED Grow Lights On or Off. This will not affect the timing of your light cycle and occasional use will not harm your plants.

Once pressed, the Lights will stay On/Off until the next time they are set to go On/Off.

Set Lights 'ON' Time

When you plug in your AeroGarden for the first time the Grow Light will come ON, and will continue to come ON at this same time every day. It will turn off automatically 15 hours later.

If you would like to change the time of day when the light comes ON follow these steps:

- Touch and hold your finger over the Lights On/Off button for about 3 seconds and release when it blinks
- Your LED lights will turn ON and OFF once to confirm a new Light on time has been set



Your Grow Lights will now come ON at this time each day, and will stay ON for 15 hours.

An Important Note About Lights:

Your AeroGarden Harvest has a built-in timer for the Grow Light that automatically provides your plants with the perfect amount of "sunlight." As long as your plants get this amount of light, it does not matter what time the lights are off. You may find it most convenient to have the lights go on in the morning and off at night, to match your own personal wake and sleep schedule.

Did You Know Your control panel buttons will light up when you plug in your garden? They will remain on and turn RED when there is an alert.

To Start a New Garden

To start a new garden, touch and hold your finger over the  button for about 5 seconds. The  button will flash 3 times to confirm it was reset. All of your reminders are now reset and you're ready to plant.

IMPORTANT SAFETY INSTRUCTIONS

**When using this AeroGarden electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this AeroGarden furnishing. SAVE THESE INSTRUCTIONS**

1. To reduce the risk of electric shock, the AeroGarden has a specific plug. Do not change the plug in any way.
DANGER – to reduce risk of electric shock:
2. Always unplug the AeroGarden from electrical outlet before cleaning.
WARNING – to reduce risk of burns, fire, electric shock, or injury to persons:
3. Unplug AeroGarden from outlet before putting on or taking off parts.
4. Please take proper precautions when operating an AeroGarden near or by individuals requiring close supervision, including children.
5. Use AeroGarden only for its intended use as described in the instructions.
Do not use attachments not recommended by manufacturer.
6. Never operate AeroGarden if it has a damaged cord or plug, if it is not working properly, if it has been dropped and damaged, or if it has been dropped in water. If any of these conditions occur/exist, contact www.AeroGardenSupport.com or your country's local distributor for instructions.
7. Keep cord away from heated surfaces.
8. Never operate furnishing with air openings blocked. Keep air openings free of lint, hair, and the like.
9. Never drop or insert any object into any electrical openings.
10. Do not use outdoors.
11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
12. Do not touch moving parts or hot parts such as pumps, lights, reflective surfaces, and the like.
13. To disconnect, remove plug from outlet.
14. Do not place or submerge base, cord, plug, or Light Hood in water or other liquid to clean it.
15. Do not allow water to contact hot LED Grow Lights.
16. Use only approved and supplied parts and accessories. Use only AeroGarden LED Grow Lights with this AeroGarden model. Use of any other kind of accessory is not recommended. Replacement parts can be ordered from www.AeroGarden.com
17. Do not use AeroGarden for other than intended purpose.
18. This product is intended for household and residential use only. This product is not approved for commercial applications.
19. If supply cord is damaged, it must be replaced by manufacturer, its service agent, or similarly qualified technician in order to avoid a hazard.
20. Electrical wiring must be in accordance with local regulations.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
22. Children should be supervised to ensure they do not play with the appliance.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

U.S. CAUTION - You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

User Maintenance: Any servicing is to be performed by an authorized service representative. Use original packaging for storage when the appliance is not used.

Disconnect power before servicing or replacing lights. Use only AeroGarden LED Light replacement.

DO NOT SUBMERGE

**HOUSEHOLD USE ONLY
POUR L'USAGE À LA MAISON**

Do not immerse cord in water or other liquid, and unplug cord from outlet when not in use.



LIMITED WARRANTY

WHAT IS COVERED – This warranty covers any defects in materials or workmanship, with the exceptions stated below.

HOW LONG COVERAGE LASTS – This warranty runs for one (1) year on this AeroGarden and LED Grow Lights, from the date of original purchase, for the original purchaser/user.

WHAT IS NOT COVERED – The warranty shall not apply to problems arising from: normal wear; failure to adhere to enclosed operating instructions; serial numbered products if the serial number has been removed or defaced; products subject to negligence, accident, improper use, maintenance or storage; products damaged by circumstances beyond AeroGrow International Inc.'s control; loss or damage to removable parts; or products modified (including, but not limited to, modifications through the use of unauthorized parts or attachments) or repaired by anyone other than AeroGrow International, Inc., or its designee. This warranty excludes all incidental or consequential damages.

WHAT AEROGROW WILL DO – AeroGrow International, Inc., at its option, will repair any defects in materials or workmanship or will replace these products with ones of similar features and price. AeroGrow International, Inc.'s sole obligation and your exclusive remedy under this warranty shall be limited to such repair or replacement.

TO RETURN THIS PRODUCT – If you have questions or concerns regarding your AeroGarden, please contact Customer Service at 1-800-476-9669. Please do not return any product without contacting AeroGrow for return authorization. Unauthorized returns, as well as C.O.D. shipments, will be refused. For more information regarding returns, please see the Returns section at www.AeroGarden.com

Due to continuing improvements, actual product may differ slightly from the product described herein. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

If you have any questions please feel free to contact our customer service representatives:

US: 1-800-476-9669 | Canada: 1-800-611-9058

NEED SUPPLIES, ACCESSORIES OR INFORMATION? Call: 1-800-476-9669 or Visit Our Website: www.AeroGarden.com



We also have an active Facebook Community that loves to answer questions at facebook.com/aerogarden. "Like" us for special offers and community fun!

AeroGrow International, Inc., P.O. Box 18450, Boulder, CO 80308-1450

©2019 AeroGrow International, Inc. 010319 AC